


Best Practices for Using 2K Epoxy Primer



- Mix a **small amount** for the day (Pot life 8-12 hours)
- **Clean area with a wax and grease remover**

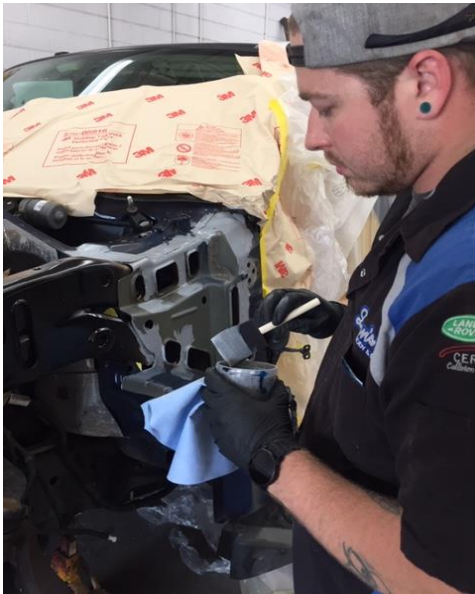

- **Apply 2K epoxy primer with a dobber or a foam brush**
- **Apply 1 -2 light coats to bare substrate (metal)**
- **Allow to dry approximately 30 minutes**



- **Apply seam sealer if required**

Note: All items in red are not included items and labor operations

This document is courtesy of Kent Automotive's Partners in Profitability Program